



# DIY GLITTER TUMBLER


*The easiest way out there that gives you amazing results!*

# SUPPLIES

\*\*This Page contains affiliate links\*\*



- Cricut StandardGrip Cutting Mat
- Cricut Tools
- White Vinyl
- Masking Paper transfer Tape
- Stainless Steel Tumblers
- Rubbing Alcohol
- Paper Towels
- Electrical Tape
- Poster Board
- Sanding Blocks
- Protective Gloves
- Small Plastic Cups
- Craft Sticks
- Fine Glitter - Crystal Waters Starcraft Glitter
- Loctite 100 General Performance Spray Adhesive
- Polyurethane Spray
- HXDZFX Resin
- DIY Tumbler Turner (Automatic)

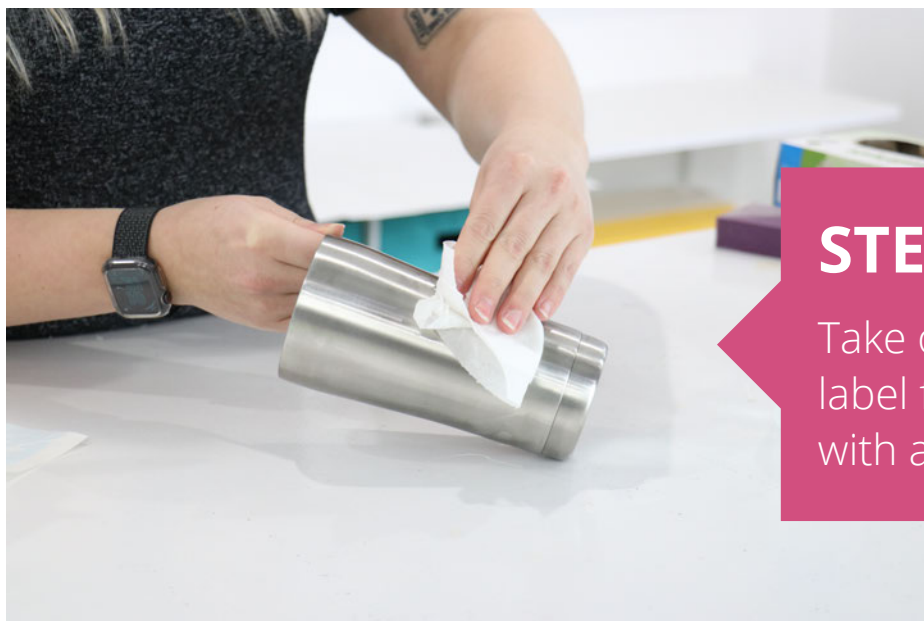

## STEP 1:

Take off the lid and remove the label from your cup. Wipe it down with alcohol to clean it.



## STEP 2:

Use electrical tape and wrap it around the top and bottom rim of the cup. Leave an inch of extra tape to fold under and make a little tail. That will make it easier to remove later.



## STEP 3:

In a well-ventilated area, glove one hand and place your hand in the cup. Apply a coat of spray adhesive evenly all around your cup.



## STEP 4:

Moving quickly before the adhesive dries, hold the cup over the poster board and sprinkle your chosen fine glitter to cover the cup evenly. You can use the poster board to easily transfer the excess glitter back into your container.




## STEP 5:

Allow the cup to dry for 30 minutes and then repeat the process adding a second coat of spray adhesive and glitter.

## STEP 6:

Once the cup has dried for about an hour, go back to your well-ventilated area and spray the tumbler with an even coat of polyurethane. Allow the cup to dry for at least an hour.

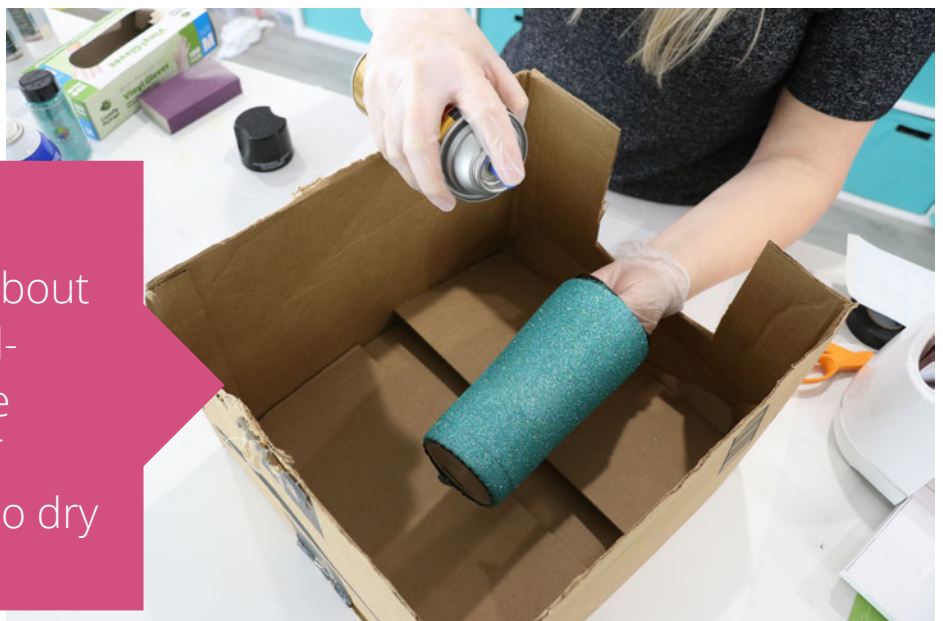



### STEP 7:

Once dry, remove the electrical tape



### STEP 8:

Reapply the tape a tiny bit higher than you did before. We want the resin to create a nice seal around your glitter and reapplying the tape to allow room for the epoxy to seal is how we will achieve that.



### STEP 9:

Pour 15-20 ml's of each part of the resin separately, mix them, pour them together and mix for at least 3 minutes.




## STEP 10:

Put on gloves, stick your tumbler into your turner, and start applying your resin. As your cup is turning, use your fingers to scoop and apply the resin, smoothing everything out with your fingers.



## STEP 11:

Allow the cup to turn on the turner for 30-45 minutes. Then carefully remove the electrical tape from your cup as it turns. Then let it turn for at least 5 more hours

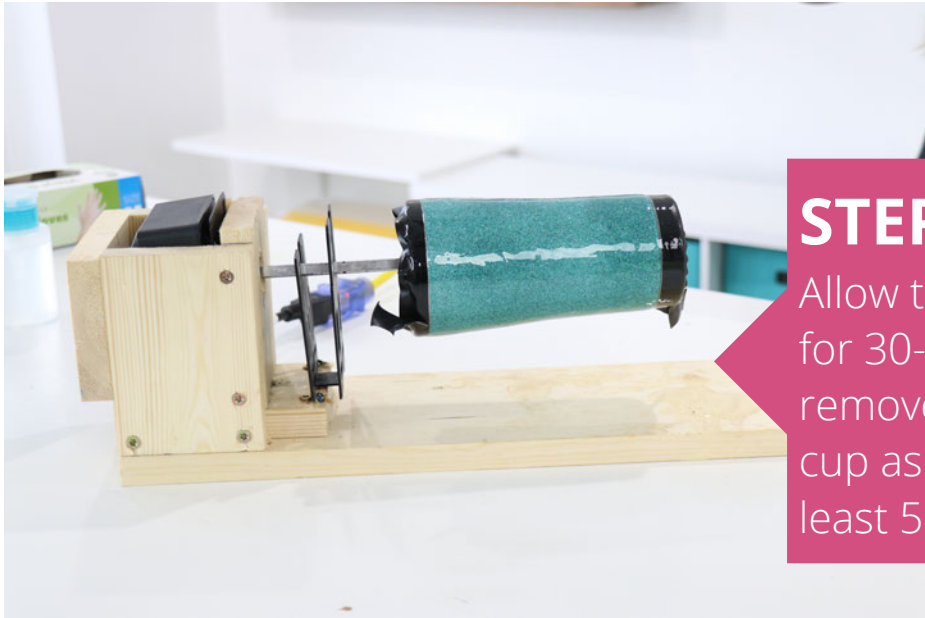

## STEP 12:

If you used chunky glitter, you will need to sand down the cup. If you used fine glitter, sanding is optional. Clean the tumbler with rubbing alcohol before applying your decal.





### STEP 13:

Add your decal and wipe the tumbler down with alcohol again. Then retape your edges in the same spot as last time.



### STEP 14:

Repeat the process of mixing and applying resin onto your tumbler. You will end up using less resin this time.



### STEP 15:

After 30 minutes take the tape off, wipe with alcohol, and allow it to spin for at least 5 hours. Remove it from the turner and set sit for 24 hours to fully cure.